

Clavier étudié : DELL Modèle SK-8100 Azerty (PS/2)

Concernant la trame : L'élément souligné est un élément qui se répète tant que la touche n'est pas relâchée.

Touche	Trame transmise : <u>touche pressée</u> touche relâchée	Code touche
Echap	<u>76</u> ... <u>76</u> F0 76	76
F1	<u>05</u> ... <u>05</u> F0 05	05
F2	<u>06</u> ... <u>06</u> F0 06	06
F3	<u>04</u> ... <u>04</u> F0 04	04
F4	<u>0C</u> ... <u>0C</u> F0 0C	0C
F5	<u>03</u> ... <u>03</u> F0 03	03
F6	<u>0B</u> ... <u>0B</u> F0 0B	0B
F7	<u>83</u> ... <u>83</u> F0 83	83
F8	<u>0A</u> ... <u>0A</u> F0 0A	0A
F9	<u>01</u> ... <u>01</u> F0 01	01
F10	<u>09</u> ... <u>09</u> F0 09	09
F11	<u>78</u> ... <u>78</u> F0 78	78
F12	<u>07</u> ... <u>07</u> F0 07	07
Impr. Écran / Syst	E0 12 <u>E0 7C</u> ... <u>E0 7C</u> E0 F0 7C E0 F0 12	
Arrêt défil	<u>7E</u> ... <u>7E</u> F0 7E	7E
Pause / Attn	E1 14 77 E1 F0 14 F0 77	
²	<u>0E</u> ... <u>0E</u> F0 0E	0E
& 1	<u>16</u> ... <u>16</u> F0 16	16
é 2 ~	<u>1E</u> ... <u>1E</u> F0 1E	1E
« 3 #	<u>26</u> ... <u>26</u> F0 26	26
' 4 {	<u>25</u> ... <u>25</u> F0 25	25
(5 [<u>2E</u> ... <u>2E</u> F0 2E	2E
- 6	<u>36</u> ... <u>36</u> F0 36	36
è 7	<u>3D</u> ... <u>3D</u> F0 3D	3D
_ 8 \	<u>3E</u> ... <u>3E</u> F0 3E	3E
ç 9 ^	<u>46</u> ... <u>46</u> F0 46	46
à 0 @	<u>45</u> ... <u>45</u> F0 45	45
) °]	<u>4E</u> ... <u>4E</u> F0 4E	4E
= + }	<u>55</u> ... <u>55</u> F0 55	55
Effacement arrière	<u>66</u> ... <u>66</u> F0 66	66
Tabulation	<u>0D</u> ... <u>0D</u> F0 0D	0D
A	<u>15</u> ... <u>15</u> F0 15	15
Z	<u>1D</u> ... <u>1D</u> F0 1D	1D

E	24 ... 24 F0 24	24
R	2D ... 2D F0 2D	2D
T	2C ... 2C F0 2C	2C
Y	35 ... 35 F0 35	35
U	3C ... 3C F0 3C	3C
I	43 ... 43 F0 43	43
O	44 ... 44 F0 44	44
P	4D ... 4D F0 4D	4D
^	54 ... 54 F0 54	54
\$ £ ¢	5B ... 5B F0 5B	5B
Entrée	5A ... 5A F0 5A	5A
Verrouillage majuscules	58 ... 58 F0 58	58
Q	1C ... 1C F0 1C	1C
S	1B ... 1B F0 1B	1B
D	23 ... 23 F0 23	23
F	2B ... 2B F0 2B	2B
G	34 ... 34 F0 34	34
H	33 ... 33 F0 33	33
J	3B ... 3B F0 3B	3B
K	42 ... 42 F0 42	42
L	4B ... 4B F0 4B	4B
M	4C ... 4C F0 4C	4C
ù %	52 ... 52 F0 52	52
* µ	5D ... 5D F0 5D	5D
Majuscule gauche	12 ... 12 F0 12	12
< >	61 ... 61 F0 61	61
W	1A ... 1A F0 1A	1A
X	22 ... 22 F0 22	22
C	21 ... 21 F0 21	21
V	2A ... 2A F0 2A	2A
B	32 ... 32 F0 32	32
N	31 ... 31 F0 31	31
, ?	3A ... 3A F0 3A	3A
; .	41 ... 41 F0 41	41
:/	49 ... 49 F0 49	49
! §	4A ... 4A F0 4A	4A
Majuscule droite	59 ... 59 F0 59	59
Contrôle gauche	14 ... 14 F0 14	14
Windows gauche	E0 1F ... E0 1F E0 F0 1F	E0 1F

Alt	11 ... 11 F0 11	11
Espace	29 ... 29 F0 29	29
Alt Gr	E0 11 ... E0 11 E0 F0 11	E0 11
Windows droite	E0 27 ... E0 27 E0 F0 27	E0 27
Application	E0 2F ... E0 2F E0 F0 2F	E0 2F
Contrôle droite	E0 14 ... E0 14 E0 F0 14	E0 14
Insertion	E0 70 ... E0 70 E0 F0 70	E0 70
Suppression	E0 71 ... E0 71 E0 F0 71	E0 71
Début	E0 6C ... E0 6C E0 F0 6C	E0 6C
Fin	E0 69 ... E0 69 E0 F0 69	E0 69
Page précédente	E0 7D ... E0 7D E0 F0 7D	E0 7D
Page suivante	E0 7A ... E0 7A E0 F0 7A	E0 7A
Flèche gauche	E0 6B ... E0 6B E0 F0 6B	E0 6B
Flèche droite	E0 74 ... E0 74 E0 F0 74	E0 74
Flèche haut	E0 75 ... E0 75 E0 F0 75	E0 75
Flèche bas	E0 72 ... E0 72 E0 F0 72	E0 72
Verrouillage numérique	77 ... 77 F0 77	77
/	E0 4A ... E0 4A E0 F0 4A	E0 4A
*	7C ... 7C F0 7C	7C
-	7B ... 7B F0 7B	7B
+	79 ... 79 F0 79	79
Entrée pavé numérique	E0 5A ... E0 5A E0 F0 5A	E0 5A
. Suppression	71 ... 71 F0 71	71
0 Insertion	70 ... 70 F0 70	70
1 Fin	69 ... 69 F0 69	69
2 Flèche bas	72 ... 72 F0 72	72
3 Page suivante	7A ... 7A F0 7A	7A
4 Flèche gauche	6B ... 6B F0 6B	6B
5	73 ... 73 F0 73	73
6 Flèche droite	74 ... 74 F0 74	74
7 Début	6C ... 6C F0 6C	6C
8 Flèche haut	75 ... 75 F0 75	75
9 Page précédente	7D ... 7D F0 7D	7D
Bouton courrier	E0 24 ... E0 24 E0 F0 24	E0 24
Bouton démarrage	E0 4B ... E0 4B E0 F0 4B	E0 4B
Bouton recherche	E0 1C ... E0 1C E0 F0 1C	E0 1C
Bouton veille	E0 3F E0 F0 3F	E0 3F